

POOL & SPA PUMPS

INSTALLATION AND OPERATION MANUAL

MAGIC SERIES | SUPER 90 SERIES | 43 SERIES | 21/80 SERIES | 80 SERIES



SPECK X
pumpen





BADU[®] POOL & SPA PUMPS

INSTALLATION AND OPERATION MANUAL

MAGIC SERIES | SUPER 90 SERIES | 43 SERIES | 21/80 SERIES | 80 SERIES

1.0	INTRODUCTION	3
2.0	SAFETY INFORMATION	3
3.0	TECHNICAL SPECIFICATIONS	4
4.0	INSTALLATION	4
5.0	OPERATION	5
	5.1 GENERAL OPERATION	
	5.2 90/500 DS (DUAL SPEED)	
6.0	SERVICE AND MAINTENANCE	7
7.0	TROUBLESHOOTING	8
8.0	WARRANTY	9

1.0 INTRODUCTION

- 1.1.1 Congratulations on your recent purchase of a Speck Pool and Spa Pump. Please take a moment to read through the entire manual before installing your new pump. Your pump must be installed and operated as specified.

2.0 SAFETY INFORMATION

2.1 **IMPORTANT SAFETY INSTRUCTIONS, READ AND FOLLOW ALL INSTRUCTIONS. SAVE ALL INSTRUCTIONS.**

- 2.1.1 **⚠ WARNING:** Hazardous Suction. Pump suction is hazardous and can trap hair and body parts resulting in severe injury or death. Do not block filtration suction lines with any part of your body. If someone becomes trapped, immediately turn the pump off.
- 2.1.2 **⚠ WARNING:** Two suction inlets (minimum 500mm apart) must be provided into every pump to avoid suction entrapment. If a suction cover is broken, missing or loose, do not operate the swimming pool or spa.
- 2.1.3 A qualified technician should carry out the pump installation.
- 2.1.4 Always wear protective clothing and gloves when handling adhesives.
- 2.1.5 The pump must be installed and operated in accordance with national wiring rules.
- 2.1.6 Children should be supervised to ensure they do not play with the appliance.
- 2.1.7 If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 2.1.8 This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.1.9 The pump power must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.
- 2.1.10 Routinely check the pump basket, skimmer and entire pool system to maximise the life of the pool equipment and personal safety. Always turn the pump off before carrying out checks and maintenance.
- 2.1.11 DO NOT remove any safety alert labels on the pump such as DANGER, WARNING or CAUTION. Keep safety labels in good condition and replace missing or damaged labels.

3.0 TECHNICAL SPECIFICATIONS

Model	Motor	Model Rated Power (Watts)	Max / Min head (m)
Magic8	Fasco Motor 806452NTG-A13AC	700	14/4
Magic 11	Fasco Motor 806452PTG-A13AC	1000	13/4
Aqua maxi 300	Fasco Motor 806452PTG-A13AC	1000	13/4
Aqua maxi 400	Fasco Motor 806452QTG-A30AC	1100	15/4
90/230	Fasco Motor 806452PTG-A13AC	1000	12/4
90/350	Fasco Motor 806452QTG-A30AC	1100	13/4
90/400	Fasco Motor 807252RTB-A11AC	1300	15/4
90/500	Fasco Motor 807252STB-A18AC	1500	18/4
90/500 DS	Fasco Motor 807281STB-A12AC	1530/290	18/2
43/480 HLS	Fasco Motor 807252XTB-A14	2100	23/6
43/480 HNS	Fasco Motor 807252XTB-A14	2100	23/6
43/480 LS	Fasco Motor 807252XTB-A14	2100	23/6
43/480 NS	Fasco Motor 807252XTB-A14	2100	23/6
43/600 LS	Fasco Motor 807252XTB-A14	2100	18/6
43/600 NS	Fasco Motor 807252XTB - A14	2100	18/6
21/80 32SG	Fasco Motor 809252VTB-B14	2770	17/6
80/50 NS	Fasco Motor 809252VTB-B14	2770	17/6
80/50GS	Fasco Motor 809252VTB-B14	2770	17/6

4.0 INSTALLATION

4.1 LOCATION

- 4.1.1 Locate the pump as close to the pool as practical and in accordance with any relevant regulations or recommendations.
- 4.1.2 The pump must be installed in a dry and well-ventilated position protected from the elements.
- 4.1.3 A clearance of 250mm is required behind the motor for ease of removal and ventilation.
- 4.1.4 The pump must be installed horizontally up to 3 metres maximum below or 1.5 metres maximum above the pool water level.
- 4.1.5 DO NOT store or use gasoline or other flammable gases or liquids in the vicinity of this pump. DO NOT store pool chemicals near the pump.
- 4.1.6 Flooding or moisture in the motor voids warranty. Ensure the pump is elevated and kept dry.

4.2 PLUMBING CONNECTION

- 4.2.1 The piping should be as direct and free from turns or bends as possible as elbows and other fittings can greatly increase friction losses.
- 4.2.2 If the pump is located below water level, isolation valves must be installed on both sides of the pump to prevent the back flow of pool water during any routine or required servicing.
- 4.2.3 Use PVC fittings for all connections. A 50mm (2") suction / inlet Union is provided and a 40mm (1.5") discharge / outlet Union is provided. The suction and discharge pipes must not be smaller in diameter than the pump fittings (otherwise flow rates may be affected).
- 4.2.4 Use plumbing Cleaner Primer to clean and prepare the pipe ends and Union Sockets. Place the Union Collars over the pipe ends. Using plumbing Solvent Cement glue the Union Sockets to the pipe ends. Allow at least 24 hours for any adhesive to dry thoroughly before starting the pump.
- 4.2.5 Ensure that the O-rings are fitted to the Union Sockets and apply a suitable O-ring lubricant if required. Also check that the pump basket lid O-ring is sufficiently lubricated.
- 4.2.6 Connect the Unions to the pump by tightening the Union Collars by hand (do not use any tools to tighten the collars as damage may occur).
- 4.2.7 Suction and discharge lines should be independently supported at a point near the pump to avoid strains being placed on the pump.

4.3 ELECTRICAL CONNECTION

- 4.3.1 Speck Pool and Spa pumps are suitable for connection to a nominal 230VAC 50hz power supply.
- 4.3.2 The motor is equipped with a flexible cable and 3-pin plug. If a power outlet is not available within 2 meters of the pump, a 3-pin power point in a safe dry place will need to be provided by an electrician.
- 4.3.3 The pump power must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.
- 4.3.4 Extension cords are unsafe around pools and must be avoided

5.0 OPERATION

5.1 GENERAL START UP GUIDE

- 5.1.1 **CAUTION:** Never run the pump without water. Running the pump “dry” for any length of time can cause severe damage to both the pump and the motor and will void the warranty.
- 5.1.2 If it is a new pool installation, make sure all piping is clear of construction debris and has been properly pressure tested. Special care must be taken to ensure no small pebbles are ingested into the pump as this voids the warranty.
- 5.1.3 The filter should be checked for proper installation, verifying that all connections are secure according to the manufacturer’s recommendations.

-
- 5.1.4 Depending on the location of the pump, do one of the following:
- a) If the pump is located below the water level of the pool, open the filter pressure valve to prime the pump with water.
 - b) If the pump is located above the water level of the pool, remove the lid and fill the basket with water before starting the pump.
- 5.1.5 Prior to replacing the lid, check for debris around the lid O-ring seat. Debris around the lid O-ring seat will make it difficult to prime the pump and may damage the O-ring.
- 5.1.6 Hand-tighten the lid collar to make an air tight seal (do not use any tools to tighten the collar as damage may occur).
- 5.1.7 Make sure all valves are open and the unions are tight. Turn on the pump, the pump will take a short time to prime and then deliver at full rate. No further priming should be required.
- 5.1.8 If prime is not established within approximately two minutes (as evidenced by a strong flow of water from the outlet) switch off the pump and repeat the procedure above (5.1.4 through 5.1.7).
- 5.1.9 If bubbles persist under the lid there is a leak in the suction connections or the lid is not sealed properly, switch off the pump and repeat the procedure above (5.1.5 through 5.1.7).

5.2 90/500DS (DUAL SPEED PUMP)

The pump comes with a Hi/Lo toggle switch on top of the motor. The pump will run on low speed for everyday filtering of your swimming pool and can be manually switched to high speed for vacuuming, backwashing of your sand filter and running a spa.

The Speck 90/500 DS Dual Speed pump is rated at 1500 Watts and the two speeds operate as follows:

Low Speed: 1416 RPM - For normal everyday running of filtration and maximum energy efficiency, Continental Water recommends a running time of 10hrs a day for an average size swimming pool (50 000 lts).

High Speed: 2843 RPM - To be used for hand vacuuming and the backwashing of your sand filter if applicable.

Continental Water recommends that the 90/500 DS pump be run using a minimum 32" sand filter or an 180sqf cartridge filter as the flow rate of the 90/500 DS pump is 500lt/min on High speed.

The use of smaller sand and cartridge filters is not recommended by Continental Water and may void the warranty.

Continental Water takes no responsibility for damage that may occur to any pool equipment (Sand Filter, Cartridge Filter, Chlorinator, Cleaner, etc) or any other pool equipment directly or indirectly attached to your filtration system resulting from the incorrect matching of your pool pump to your associated equipment.

The 90/500 DS pump running at low speed is not sufficiently powerful to run a pool cleaner.


6.0 SERVICE AND MAINTENANCE

- 6.1.1 To achieve a maximum potential life expectancy from the pump ensure the following steps are taken:
- 6.1.2 Empty the skimmer basket regularly. The regularity will vary from pool to pool, for example:
- Where you may have lots of leaves and debris you should empty the basket twice or more for each operating cycle, particularly when using a suction type cleaner.
 - Where you may have minimal leaves and debris the basket may only require checking weekly.
 - Always remove children's toys or balls from the pool when not in use.
- 6.1.3 **Check for leakages.** Carry out weekly inspections, for example:
- Around the pump, filter, chlorinator and heater (where fitted) where water can leak from all or some of these components.
 - If water is present whether you can see the source of the leak or not, then contact your serviceman immediately. This may reduce the possibility of major pump damage.
- 6.1.4 Inspect and empty the pump lint basket at least weekly.
- Turn pump OFF at the mains power supply.
 - Close all valves where fitted, to prevent water loss through pump.
 - Remove clear plastic screw-down lid off the pump.
 - Remove yellow plastic basket and empty any contents. If a sock or filter has been fitted, inspect it for holes and replace if necessary.
 - Inspect the chamber housing of the basket, ensure no debris, pebbles or leaves have fallen in whilst removing the basket, remove all foreign material.
 - Return the yellow basket into the chamber, there are two sets of guides for the basket to sit in. Ensure the basket is correctly seated to avoid any damage to the pump.
 - Lubricate the O-ring.** The O-ring can be located on top of the chamber where the lid screws on, use a silicone lubricant which is available from your pool shop or serviceman (Do NOT use petroleum gel or axle grease as this will damage the O-ring).
 - Replace the screw-down lid firmly by hand only.
 - Re-open any valves where fitted that were closed in step (b) above.
 - Operate the pump.** It is essential that the pump be operated after carrying out the above procedure, this will purge any air from the system. Start the pump and wait until the lint basket is full of water. Then where fitted, open air bleed fitting on the filter to expel air. Once the stream of water emerges all air is gone and the air bleed valve can be closed.
- 6.1.5 **Dirty Filters.** Restricted water flow from a dirty filter can cause the pump to overwork thus shortening it's lifespan. Please follow the filter manufacturer's guidelines for the method and frequency of cleaning.

6.1.6 **Noisy Pump.** As with all mechanical devices, if more noise than usual is heard coming from the pump, notify your pool retailer or your pool service technician. A noise can indicate a fault and the longer this is left unattended the risk of increased damage can occur resulting in an expensive repair or replacement.

6.1.7 **Pebblecrete Pools.** All pebblecrete or similar pools should initially be fitted with a sock in either the skimmer basket or in the pump lint basket to prevent damage to the pump as a result of loose stones making their way through the system. Should a sock not be installed, any subsequent damage caused by loose pebble entering the pump impeller will void the warranty.

7.0 TROUBLESHOOTING

7.1.1  **WARNING:** Your pump must be serviced by a professional service technician qualified in pool / spa installation. The following procedures must be followed exactly. Improper installation and / or operation can create dangerous electrical hazards, which can cause high voltage to run through the electrical system. This can cause property damage, serious personal injury and / or death. Improper installation and / or operation will void the warranty.

7.2 GENERAL PUMP TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
1. Pump will not prime	A. Suction air leak	Make sure see-through lid and O-rings are clean and properly positioned. Hand tighten see-through lid. Tighten all pipes and fittings on suction side of pump. Be sure water in pool is high enough to flow through skimmer box.
	B. No water in pump	Make sure strainer tank is full of water and free of air.
	C. Closed valves or blocked lines	Open all valves in system. Clean skimmer and strainer tank. Open pump and check for clogging of impeller.
	D. Low voltage to motor	Check voltage at motor. If low, pump will not come up to speed
2. Motor does not turn	A. No power to motor	Check that all power switches are on. Be sure fuse or circuit breaker in the power box is properly set.
	B. Pump jammed	With power off, turn shaft. It should spin freely. If not, repair by an authorised repairer is required.
3. Low flow	A. Dirty Filter	Backwash filter or clean cartridges.
	B. Suction leak	See problem 1 above.

8.0 WARRANTY

The Australian Competition and Consumer Act (2010) (Cth) (including the Australian Consumer Law) guarantee certain conditions, warranties and undertakings, and give you other legal rights in relation to the quality and fitness for purpose of consumer goods sold in Australia (Applicable Laws).

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This express warranty provided by Continental Water Systems Pty Ltd (CWS) is in addition to any other rights and remedies imposed by Applicable Laws that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any Applicable Laws which cannot be excluded, restricted or modified.

Any express warranty is limited to the length of time specified in the 'Terms of Express Warranty' referred to below, being from the date of purchase and is subject to the conditions set out in the express warranty. In no event shall CWS be accountable for consequential loss or damage resulting from the breach of any express warranties.

Under Applicable Laws you may have different or additional legal rights, including longer warranty periods, which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow certain limitations on how long an implied warranty lasts, so the limitations in this warranty may not apply to you.

TERMS OF EXPRESS WARRANTY

Your Speck pool pump carries a manufacturer's warranty of two (2) years on the motor and five (5) years on wet end components including casing, diffuser, gland housing, impellor and mechanical seal subject to the following terms:

- CWS warrants to the original purchaser that all Speck pool pumps manufactured by CWS are free from defects in workmanship and materials of construction at the time of dispatch from CWS premises.
- The warranty on ancillary components not manufactured by CWS will be limited to the warranty extended to CWS by the manufacturer of the said ancillary components.
- The replacement of consumable items, including lids and baskets is not covered by this warranty.

EXCLUSIONS

To the maximum extent permitted by Applicable Laws, the warranty will not apply under any of the following circumstances:

- The Purchaser is in breach of the terms and conditions of sale.
- The product was used for a purpose or under conditions other than what it was intended for.
- The product was repaired, modified or altered by any person other than a CWS Authorised Representatives.
- The product was not installed, maintained and/or operated in complete compliance with the installation and operating instructions and any instructions provided by CWS.

-
- The product was operated under adverse conditions including, but not limited to, use with water exceeding 35°C, hot operating enclosures with poor ventilation, fluctuating power supplies, water pressure greater than 250kpa, or lack of protection from the weather.
 - Normal wear and tear or deterioration associated with the age or use of the product.
 - The product was damaged by foreign debris entering via suction pool cleaners, refer to equipment installation instructions.
 - The product was damaged by weather and other environmental conditions including but not limited to storm, flood, and/or heat wave damage.
 - Failure of the mechanical seal due to insufficient water flow caused by any blockage or ingress of foreign matter of any kind whatsoever.
 - Damage to the product caused by the addition of chemicals, salt filter media or any other thing through the skimmer box.
 - Failures or any defects in component, part or operating function of the product, which is in the opinion of CWS the result from misuse, negligence, rebuilds or modification, incorrect installation by persons that are not CWS Authorised Representatives.

LIMITATIONS

Except to the extent permitted by Applicable Laws, breach of a condition or warranty, shall be limited to replacing or acquiring the same equipment (or any part thereof) or the services supplied.

The maximum liability incurred by CWS shall not exceed in any case the contract price for the equipment or the product parts claimed to be defective. Further, CWS shall not be liable for any loss, damage or delay directly or indirectly caused by any malfunction of or defect of or failure of the equipment other than as expressly stated in this warranty.

Subject to Applicable Laws, the repair or replacement of the product or part of the product is the absolute limit of CWS liability under this express warranty.

WARRANTY CLAIMS

If you consider that the product which you have purchased is not of acceptable quality, has a latent defect or is otherwise not compliant with the warranties, conditions, undertakings and legal rights you have under Applicable Laws you can make a claim under this warranty by contacting:

Continental Water Systems Pty Ltd
5 Anvil Road, SEVEN HILLS NSW 2147
Email: sales@continentalwater.com.au

All onsite service work is subject to a service call charge which will be quoted and which must be accepted by the customer before any or all work will be carried out.

Any equipment requiring warranty repair (alleged) must be returned to the place of purchase and or nearest CWS approved stockist (prepaid), as soon as the purchaser becomes aware of any fault. Neither CWS nor the approved CWS stockist shall be responsible for any goods damaged in transit. If the equipment is found to be defective after examination it will be repaired or replaced free of charge and returned freight collect. If the equipment is not defective and outside of warranty all repair or replacement costs will be charged to the purchaser or their representative and returned freight collect.

All Warranty claims must be accompanied by the proof of purchase, alleged defect and any appropriate documentation (Historical and maintenance records).

8.2 CUSTOMER WARRANTY INFORMATION

8.2.1 Please complete the information below at time of installation and retain in the event you need to file a warranty claim

Model Number	
Pump Serial Number	
Purchase Date	
Purchased From	
Installation Date	
Installer	



1300 166 253 for Sales and Service
e sales@continentalwater.com.au / accounts@continentalwater.com.au ABN: 71 050 287 735

New South Wales Office
t (02) 8814 2800
f (02) 9838 7030

Victorian Office
t (03) 8794 3800
f (03) 9702 3941

Queensland Office
t (07) 3434 1100
f (07) 3219 2266

New Zealand Office
t 0011 64 9570 9570
f 0015 64 9527 7641